



100FM

FLOOR MOUNT

IMPORTANT INFO

- Use only with EZ-ON Vest. Compatible Vests include: 103Z, 203PB, 303Z, 403PB
- Can be used in a school bus or family vehicle
- Seats must have an entry between the seatback and the seat bottom. Seats must be stationary seats or seats that lock.
- Professional installation required for the tether hardware kits.
- Passengers seated behind occupants with a Floor Mount must be wearing a seatbelt, a transportation vest, or must be unoccupied.
- Register this product to be notified of a safety recall.

WARRANTY

EZ-ON Products stands behind the products we make. Warranty covers any defects in material or workmanship under normal use during the warranty period. We will repair or replace product defects for 1 year from manufacturer date.

WARNING


Death or serious injury can occur if manufacturer's instructions are not followed correctly. All EZ-ON products are dynamically tested to meet NHTSA standards. Please follow washing instructions on product tag. Replace product if it is damaged, frayed, or has been in a crash. Recommended replacement after six years. EZ-ON Products are not liable for injury if these recommendations are not followed.

EMERGENCY RELEASE PROCEDURE

When evacuating the passenger in a safety vest, the vest webbing is never cut. Cut the black shoulder straps and the burgundy strap behind the seat. Passenger can leave the vehicle wearing the vest.



**100 SCBC
EZ-ON Safe Cut
Belt Cutter**

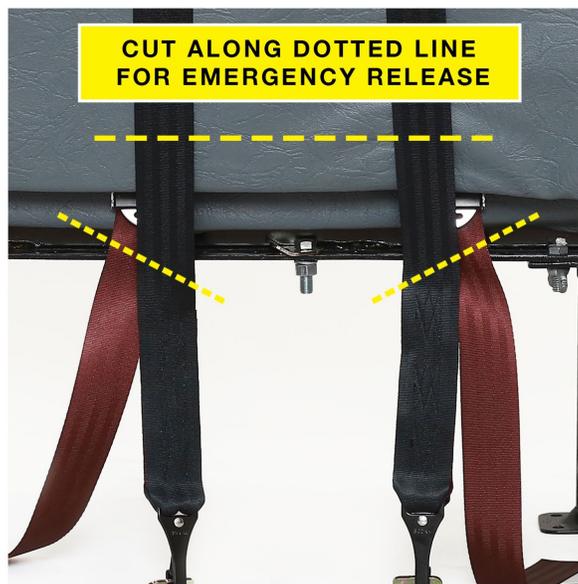



100FM

FLOOR MOUNT

1




2



3



4

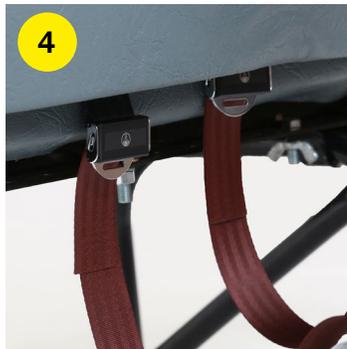


5



6



7

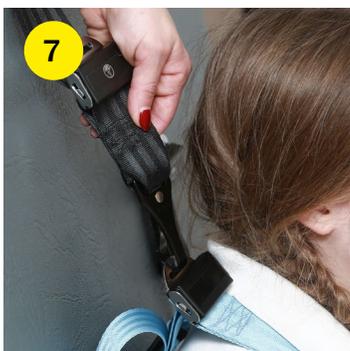

8



INSTALLATION INSTRUCTIONS

1.. Have a professional install the two tether hardware kits at the base of the seat approximately shoulder distance apart.

*Instructions for mounting hardware are in the bag of hardware.

2. Attach (2) Tether hooks which have the burgundy and black straps coming from it, to the installed tether hardware kits.

3. Place the black straps over the top of the seat.

4. Put the burgundy colored hip straps through the opening where the seat back and seat bottom meet.

5. With passenger properly seated (hips low against back of seat and shoulders flush to seat) attach the tether hooks to the hip level D-rings.

*Passenger must have a properly fitted vest with all closures secure. See Vest manufacturer instructions for proper fit.

6. Adjust the length of the hip straps first, by pulling on the excess webbing. So, they are snug and without any slack.

7. From the top of the seat take the 2 tether hooks and fasten them to the tether slots in the shoulder adjusters.

8. Adjust the shoulder straps by pulling on the excess webbing at adjuster to remove any slack.

*Passenger should not be able to move their bottom more than 2" in any direction.