



**EZ-ON
PRODUCTS**

543-KID CAM

INSTALLATION INSTRUCTIONS



For passengers over 31 lbs

IMPORTANT INFO

- Meets FMVSS213
- For passengers over 31lbs
- Must be used on school bus seats ONLY
 - The bus seat must allow the strap/hardware to pass between the seat back and bottom cushion.
 - Like all restraints that attach to bus seating using a vertical strap around the seat back, the entire seat directly behind the restrained passenger may be occupied only by passengers who are also restrained (including by use of a seat belt).
 - Seat must be equipped with a lap belt that is in compliance with FMVSS School bus seat belt requirements.
- When heavy clothing, like winter jackets, are worn, the vest must be worn underneath.
- Recommended replacement 6 years after date of manufacturing.



WARNING

Death or serious injury can occur if manufacturer's instructions are not followed correctly. Read below warning information for replacement recommendations.



REGISTER

Register this transportation vest to be notified of a safety recall.



WARRANTY


EZ-ON Products stands behind the products we make. Warranty covers any defects in material or workmanships under normal use during the warranty period. We will repair or replace product defects for 1 year from manufacturer date.

WARNING: All EZ-ON products are dynamically tested to meet NHTSA standards. Replace product if it is damaged, frayed, or has been in a crash. Recommended replacement period is six years. EZ-ON Products are not liable for injury if these recommendations are not followed.

CUT ALONG DOTTED LINE FOR EMERGENCY RELEASE



**100 SCBC
EZ-ON Safe Cut
Belt Cutter**

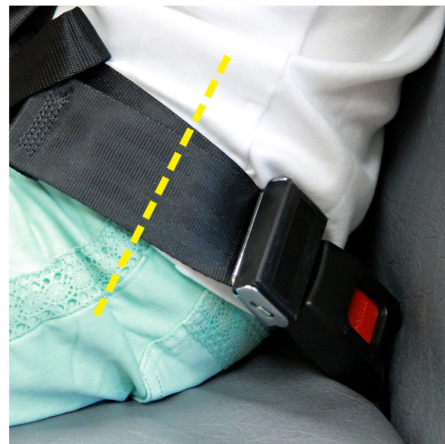



**EZ-ON
PRODUCTS**

543



**SCHOOL BUS
USE ONLY**

**SCAN CODE TO VIEW VIDEO
INSTRUCTIONS & MORE**



INSTALLATION INSTRUCTIONS



1. Unlock the bus seat and lift up.



2. Wrap gray strap around bus seat back. Rest black shoulder straps and crotch straps on front of seat.



3. Close and lock the bus seat.



4. Place Y-bridge on the seat top.



5. Lower flat bracket over back of bus seat. Attach the snap hook onto the flat bracket.



6. Press the spring lock.



7. Pull gray webbing end snug.



8. Place belt straps over each shoulder.



9. Locate crotch strap in the center of passenger's legs.



10. Feed seat belt through the first shoulder strap and then through the crotch strap.



11. Feed seat belt through second shoulder strap loop.



12. Buckle lap belt low and snug across lap, reducing any slack.



13. Press spring-locks on each vest adjuster. Pull loose end of webbing to adjust.



14. Connect chest clip.
Keep both adjusters same height on shoulders.



15. Press spring-lock adjuster behind seat. Pull black webbing end to adjust.



16. Use velcro tab to control excess webbing.