



INSTALLATION INSTRUCTIONS

IMPORTANT INFO

- Meets FMVSS 213 when used with a compatible EZ-ON vest; model 103Z, 203PB, 303Z or 403PB.
 - Do not use with non-EZ-ON vests.
- Can be installed in a school bus and in a personal family vehicle.
 - Professional installation of included hardware kit is required. Instructions for EZ-ON's hardware kit are included on the kit's assembly bag; video instructions are also available at ezonpro.com.
- When used on a school bus seat.
 - The bus seat must allow the strap/hardware to pass between the seat back and bottom cushion.
 - Like all restraints that attach to bus seating using a vertical strap around the seat back, the entire seat directly behind the restrained passenger may be occupied only by passengers who are also restrained (including by use of a seat belt).
- When used in a personal family vehicle
 - The seat must allow strap/hardware to pass between the seat back and bottom cushion.
 - Must have access to floor behind the seat.
- Recommended replacement: 6 years after date of manufacturing.
- Passengers using an EZ-ON transportation vest systems that include this mount:
 - Must weigh 31-168 lbs; over 168 lbs, see next bullet
 - May, if over 168 lbs, continue to use the vest system only in Positioning-Device Mode, in which a seat belt meeting federal standards is also worn over the top of the properly worn vest.



WARNING

Death or serious injury can occur if manufacturer's instructions are not followed correctly. Read below warning information for replacement recommendations.



REGISTER

Register this transportation vest to be notified of a safety recall.




WARRANTY

EZ-ON Products stands behind the products we make. Warranty covers any defects in material or workmanships under normal use during the warranty period. We will repair or replace product defects for 1 year from manufacturer date.

WARNING: All EZ-ON products are dynamically tested to meet NHTSA standards. Replace product if it is damaged, frayed, or has been in a crash. Recommended replacement period is six years. EZ-ON Products are not liable for injury if these recommendations are not followed.



**100 SCBC
EZ-ON Safe Cut
Belt Cutter**

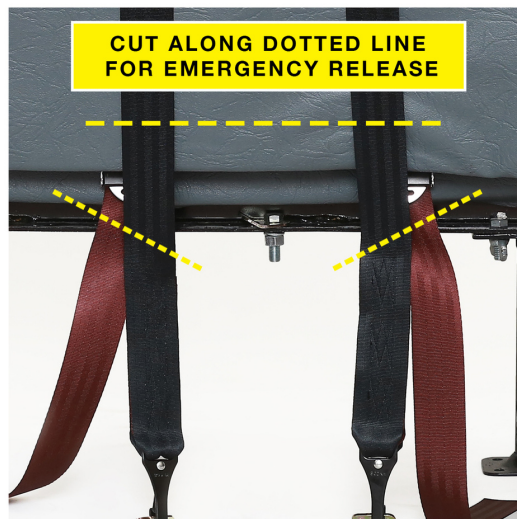

If passenger is over 168 lbs and is also wearing seatbelt, the vehicle seatbelt will need to be cut as well



**EZ-ON
PRODUCTS**

100FM

SCAN CODE TO VIEW VIDEO
INSTRUCTIONS & MORE



INSTALLATION INSTRUCTIONS

Passenger must have a properly fitted vest with all closures secure. See Vest manufacturer instructions for proper fit.



1. Have a professional install the two tether hardware kits at the base of the seat approximately shoulder distance apart.



2. Attach (2) tether hooks which have the burgundy and black straps coming from it, to the installed tether hardware kits.



3. Place the black straps over the top of the seat.

Instructions for hardware kit are found on the anchor kit assembly bag and video instructions on website.



4. Put the burgundy colored hip straps through the opening where the seat back and seat bottom meet.



5. With passenger properly seated (hips low against back of seat and shoulders flush to seat) attach the tether hooks to the hip level D-rings.



6. Adjust the length of the hip straps first, by pulling on the excess webbing. So, they are snug and without any slack.



7. From the top of the seat take the 2 tether hooks and fasten them to the tether slots in the shoulder adjusters.



8. Adjust the shoulder straps by pulling on the excess webbing at adjuster to remove any slack.



Passenger should not be able to move their bottom more than 2" in any direction.

Passengers who weigh over 168lbs must also wear a seat belt, per vehicle manufacturer instructions, over the top of a properly used vest.

Exceptional Safety Solutions for Transporting Children and Adults.