




**EZ-ON
PRODUCTS**

43YC

CAR CAM WITH CROTCH STRAP

INSTALLATION INSTRUCTIONS

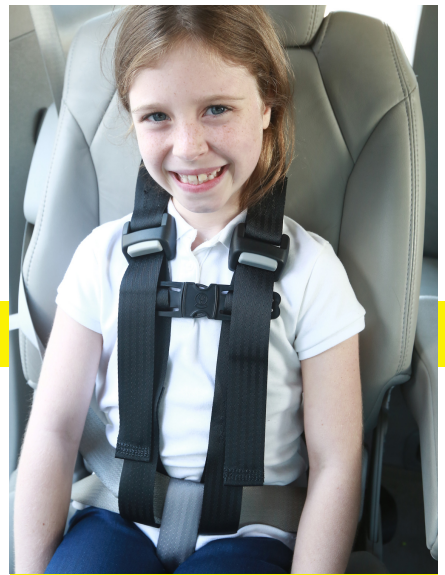

ONE SIZE 31-106 LBS

IMPORTANT INFO

- Meets FMVSS213
- Installation of 43YC requires the use of a tether anchor.
 - Use the vehicle's factory-installed (or EZ-ON's tether hardware kit) tether anchor.
 - If the vehicle manufacturer states a tether anchor weight limit and the child exceeds that weight, install/use EZ-ON's tether hardware kit.
 - Instructions for EZ-ON's hardware kit are included on the kit's assembly bag; video instructions are also available at ezonpro.com.
- Passengers using EZ-ON transportation vest systems 43YC:
 - Must weigh over 31- 106lbs
 - Must utilize a seat belt, per vest instructions.
 - Should not ride in a booster seat.
- When heavy clothing, like winter jackets, are worn, the vest must be worn underneath.
- Recommended replacement 6 years after date of manufacturing.



WARNING

Death or serious injury can occur if manufacturer's instructions are not followed correctly. Read below warning information for replacement recommendations.



REGISTER

Register this transportation vest to be notified of a safety recall.



WARRANTY

EZ-ON Products stands behind the products we make. Warranty covers any defects in material or workmanships under normal use during the warranty period. We will repair or replace product defects for 1 year from manufacturer date.

WARNING: All EZ-ON products are dynamically tested to meet NHTSA standards. Replace product if it is damaged, frayed, or has been in a crash. Recommended replacement period is six years. EZ-ON Products are not liable for injury if these recommendations are not followed.

CUT ALONG DOTTED LINE FOR EMERGENCY RELEASE



**100 SCBC
EZ-ON Safe Cut
Belt Cutter**



605 Commerce Way West
PO Box 660
Jupiter, FL 33458

561.747.6920
cs@ezonpro.com

EZONPRO.COM



**EZ-ON
PRODUCTS**

**SCAN CODE TO VIEW VIDEO
INSTRUCTIONS & MORE**

437C



INSTALLATION INSTRUCTIONS

Check the vehicle owner's manual to locate factory installed tether bracket.
437C tether strap can be turned one half twist to snap on difficult anchor locations.



1. Locate the tether anchor bracket.



2. Connect tether hook to tether anchor bracket directly behind passenger. Twenty degrees from "Y" center is acceptable.



3. Tighten by pulling on black webbing so Y-bridge sits on seat top.



4. Prior to seating the passenger, place all of the straps on the front of the seat. Ensure gray strap is laying across bottom of the seat cushion.



5. Seat passenger on the gray strap, so that it extends forward from between the passenger's legs. Place the adjustable black straps in front of the passenger's body.



6. Thread the vehicle seat belt through the first chest strap, then the gray crotch strap, and then through the second strap.



7. Buckle seat belt low across the lap and reduce the belt slack. Make sure seat belt is in the locked position.



8. First adjust the gray crotch strap from the top of the seat, by pulling on the loose webbing.



9. Adjust the shoulder straps by pulling down on the loose webbing.



10. Clip chest clip, and position at armpit level.

WARNING: Do not shorten the shoulder straps too much. This can cause the lap belt to be over the stomach causing injury.

Exceptional Safety Solutions for Transporting Children and Adults.